


PARALLEL SEWING FOOT

This foot is used for sewing rows of stitching in parallel rows.

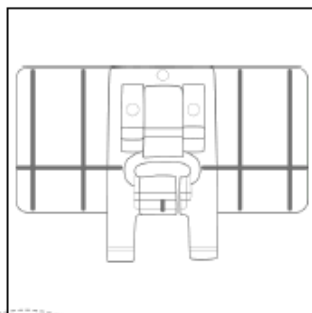

1. Snap on the Parallel Sewing Foot.
 2. Sew the first row of stitches.
 3. Align the first row of stitching either between or on the red guideline markings on the foot, depending on the desired distance from the first row of stitching. Sew the next row of stitches, using the red guidelines as a reference.
 4. Align the two rows sewn, following the red guideline markings on the foot, depending on the desired distance between rows on stitching. Sew the next row of stitches, using the red guideline markings as a reference.
- Continue for as many rows as desired.

Note: The first vertical guidelines, to either the left or right is $\frac{1}{2}$ " from the center needle position. The second guideline is approximately $\frac{1}{4}$ " from the first guideline on either side. There is a marking at the center front of the foot that can also be used as a reference.